



**INSTRUCTION SHEET**

Wall Mount


View of interior components and mounting components

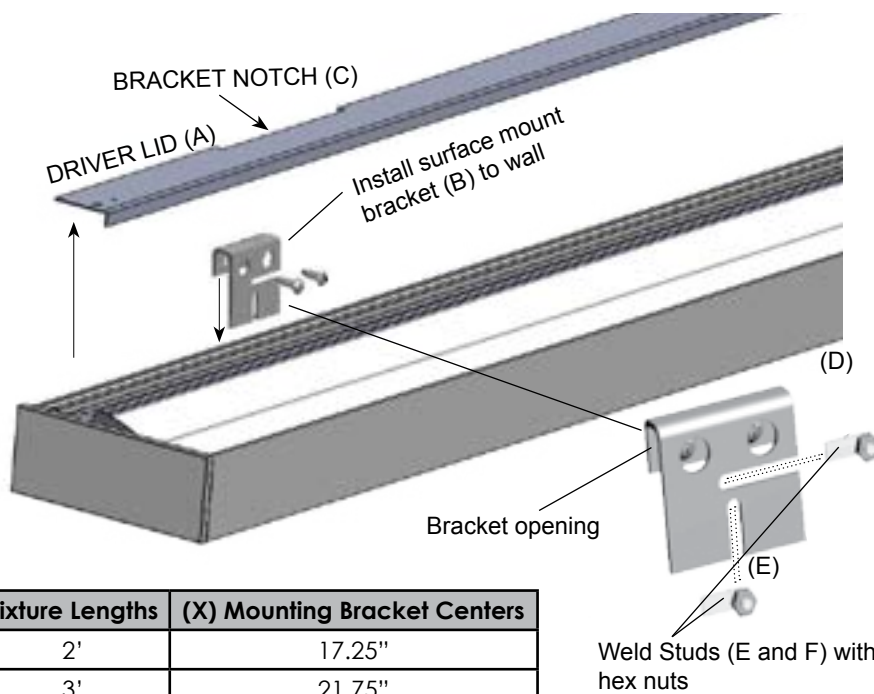

Fixture Lengths	(X) Mounting Bracket Centers
2'	17.25"
3'	21.75"
4'	26.25 "

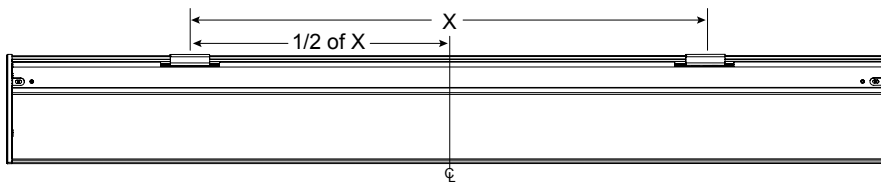

View of continuous connection

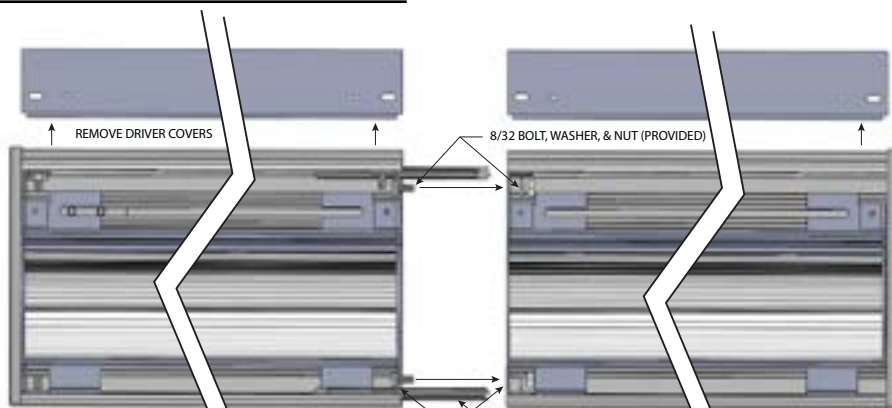

\*Please see continuous row matrix for complete info regarding runs and lengths available.

**Note:** To be installed by a qualified electrician per N.E.C. and all local codes.

**NOTE:**

Before installing, contractor must drill power feed opening into back of fixture. If necessary, driver can be field relocated by sliding along channel. Extensions to wires may need to be field installed / supplied to accommodate distance. CAUTION: be aware to avoid drilling through driver or other interior components.

**MOUNTING**

1. Remove driver lid (A) to remove mounting brackets.
2. Detach surface mount bracket (B) located within the fixture housing by removing hex nuts and sliding out weld studs (D and E). Set aside.
3. Install and secure surface mounting bracket (B) to the wall in the desired location making sure to align with notched areas (C) located on the mounting edge of the fixture. (mounting screws by others).
4. Slide fixture so notched area in back of the fixture line up with surface mounting bracket opening and secure into place on the fixture by tightening hex nuts on vertical weld stud (E) and horizontal weld stud (F). NOTE: Always use BOTH weld studs.

**CONTINUOUS CONNECTION**

5. Install surface mounting brackets to wall. Attach next section by sliding the housing onto the alignment splines. Follow step 4 to secure.
6. Connect sections using provided 8/32" bolts, washers, & nuts with pinch brackets on either side.
7. Tighten set screws on alignment spline to lock the 2 fixtures together once the seam is tight.
8. Complete wire make up, re-install driver cover.

**820-00109**

V-1014