



## "LAMP SUPPORT CLIP"

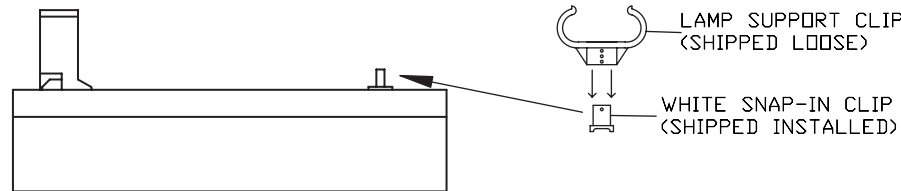

SYDNEY

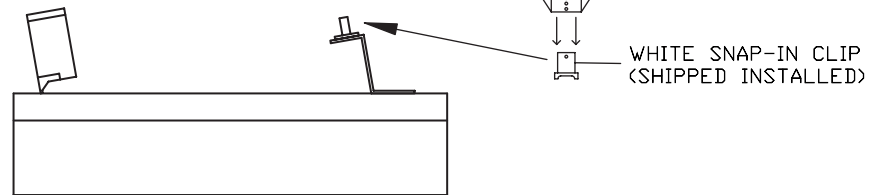

SYDNEY "OL"

ALL SYDNEY FIXTURES REQUIRE A LAMP SUPPORT CLIP (EXCEPT FOR SYDNEY 9T, 13T OR ANY QUAD TYPE). THESE CLIPS MUST BE USED IN ALL INSTALLATIONS REGARDLESS OF LAMP ORIENTATION. FOR SAFETY, THESE CLIPS ARE SHIPPED LOOSE. EACH FIXTURE HAS A "SNAP-IN CLIP" ALREADY ATTACHED IN THE FACTORY. TAKE THE "LAMP SUPPORT CLIP" AND SNAP IT OVER THE WHITE "SNAP-IN CLIP" AS SHOWN. THESE FIXTURES ARE DESIGNED TO HAVE THE "LAMP SUPPORT CLIP" PUSHED ALL THE WAY DOWN TO THE LAST OF THE THREE HOLES.

## JOINING SYDNEY<sup>TM</sup> FIXTURES TOGETHER

TO JOIN TWO SYDNEY FIXTURES TOGETHER FOR FIELD CURVABILITY USING THE "VERSACURVE" CONNECTOR:

1. REMOVE THE KNOCK-OUTS FROM THE TWO FIXTURES THAT YOU WISH TO JOIN TOGETHER.

2. PUSH "PART 2" OF THE CONNECTOR THROUGH BOTH KNOCK-OUTS AS SHOWN.

3. SCREW TOGETHER "PART 1" AND "PART 2" AS SHOWN JUST USING HAND STRENGTH. INSTALL THE OPTIONAL "EXTENDER" BETWEEN PARTS 1 AND 2 IF REQUIRED.

4. FEED WIRES THROUGH THE CONNECTOR AND INTO THE NEXT FIXTURE AND MAKE THE PROPER CONNECTIONS.

