


NOLAN - SM

Precision-Edged Luminiare LED/ FLUORESCENT

INSTRUCTION SHEET

SM - Surface Mount

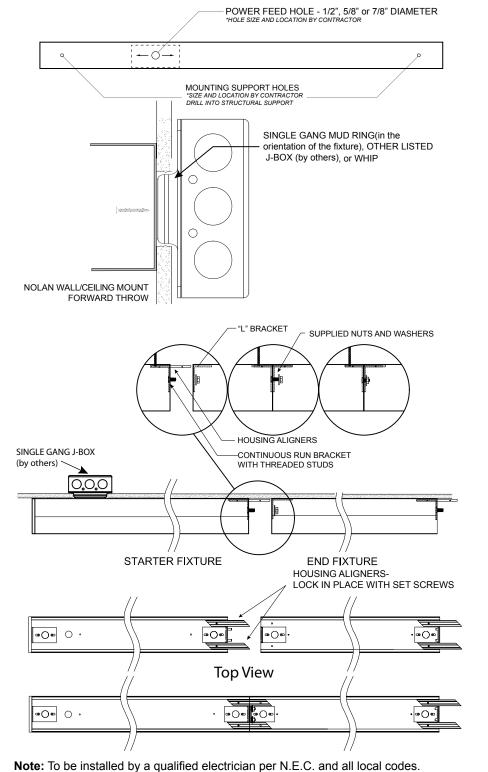

- Install J-Box (by others) with single gang mud ring horizontally mounted, or other suitable UL approved J-Box. Alternately a whip with a UL approved conduit snap-in flex connector can be stubbed out of the mounting surface, provided by others.
- 2. Remove lens and internal reflector.
- Determine fixture location on wall and note/mark the center of the J-Box/whip on the fixture.
- Drill appropriate size hole to feed wire into fixture - DO NOT DRILL INTO POWER SUPPLY - Relocate power supply if necessary - insert bushing (by others).
- Drill mounting support holes near ends of fixture - support method to be determined by contractor.
- 6. Complete wire make-up.
- 7. Securely mount fixture to surface.

For Continuous Run:

- 1. Install starter fixture and power
- 2. Install next fixture cable, power feed if necessary.
- Slide open end of fixture over starter fixture's continuous run bracket studs.
- Secure with supplied washers and nuts (Note: the internal "L" bracket should be set back approximately 1/16" from the edge of the fixture - they can be adjusted if necessary).
- 5. Tighten set screws on housing aligner.
- The connection is pins and pinch brackets.
- 7. If integral power supply, thru wire with appropriate gauge wire
- Continue installation with all other fixtures.

820-00055

V-1016