


JAKE

PR - Perimeter Regress TR Hanger Bracket Installation

INSTRUCTION SHEET

Installation Guide

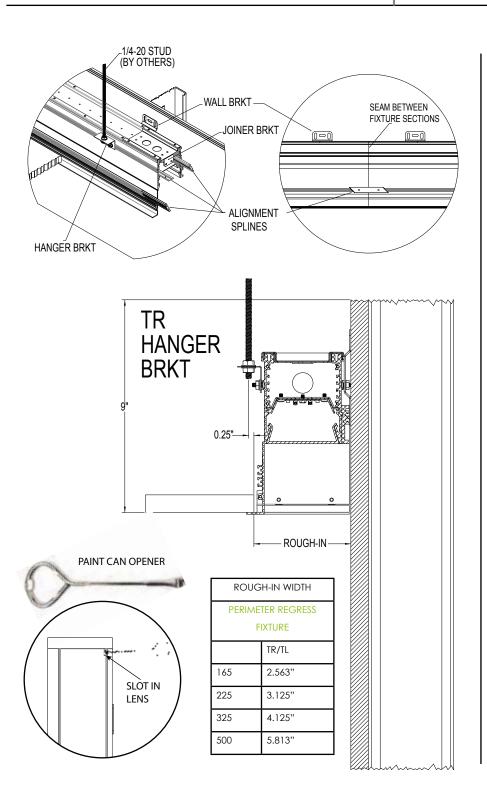

- 1. See matrix for rough-in opening length.
- 2. Ensure wall is extended 9" above ceiling.
- 3. Adjust wall brackets to align with wall studs or blocking support.
- For Stand alone fixtures, use standard metal paint can opener, available at all local hardware stores, see picture. Insert end into small slot at one end of the lens and pull out.
- For continuous runs, remove lens by pushing in lens at seam and pull lens down from edge. Then remove reflector/liner.
- 6. Install fixture(s) into roughedin opening. Install screws
 thru wall brackets and attach
 threaded rod to hanger bracket.
 For continuous runs, do not
 completely tighten screws until
 alignment splines are positioned
 between sections and tightened,
 and joiner brackets are
 tightened. Note: ensure fixture
 does not warp when tightening
 screws. Check by making sure
 lens fits properly.
- Bring conduit to fixture thru access panel or end cap and make wire connections inside fixture. Access panel can be temporarily removed to simplify wiring.
- 8. Reinstall reflector/liner and lens.

Note: To be installed by a qualified electrician per N.E.C. and all local codes.

820-00132 V-0517